

Remote Instructions

By pressing the plus (+) or minus (-) buttons all speakers will raise or lower together.

If you press one of the channels (C1 to C4) only speakers connected to that channel will raise or lower.

If you hit a channel by mistake, wait 15 to 20 seconds and the remote will go back to being on all channels

If the room becomes unbalanced (one speaker louder than the rest) press the minus (-) button until you don't hear any sound from any speaker, then press the plus (+) button and they will all raise equally.

Remote Instructions

By pressing the plus (+) or minus (-) buttons all speakers will raise or lower together.

If you press one of the channels (C1 to C4) only speakers connected to that channel will raise or lower.

If you hit a channel by mistake, wait 15 to 20 seconds and the remote will go back to being on all channels

If the room becomes unbalanced (one speaker louder than the rest) press the minus (-) button until you don't hear any sound from any speaker, then press the plus (+) button and they will all raise equally.

Remote Instructions

By pressing the plus (+) or minus (-) buttons all speakers will raise or lower together.

If you press one of the channels (C1 to C4) only speakers connected to that channel will raise or lower.

If you hit a channel by mistake, wait 15 to 20 seconds and the remote will go back to being on all channels

If the room becomes unbalanced (one speaker louder than the rest) press the minus (-) button until you don't hear any sound from any speaker, then press the plus (+) button and they will all raise equally.